Figure 1

Syringe arrangement for drawing up the sample



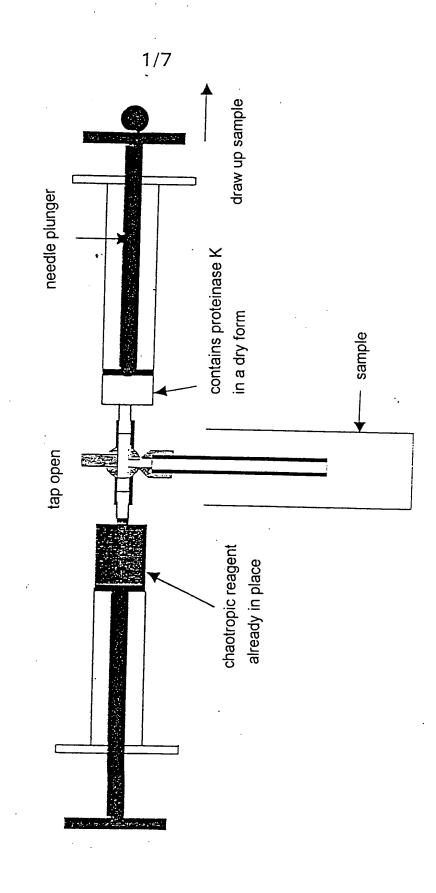


Figure 2

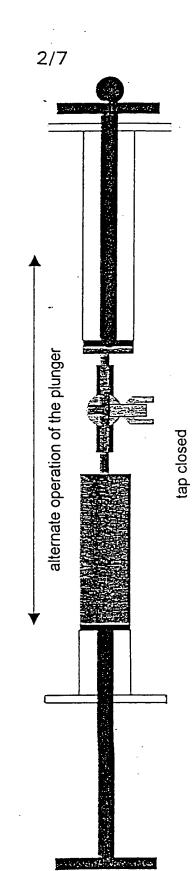


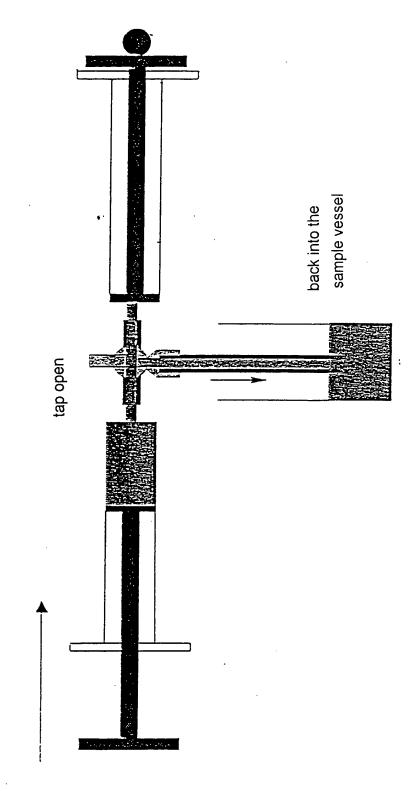

19 750PGE GEOGOT

Washing by aspirating washing buffer once

Waschpuffer

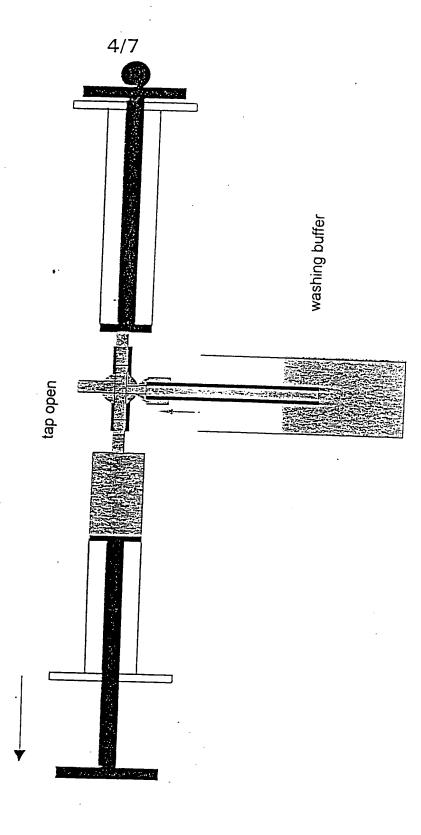

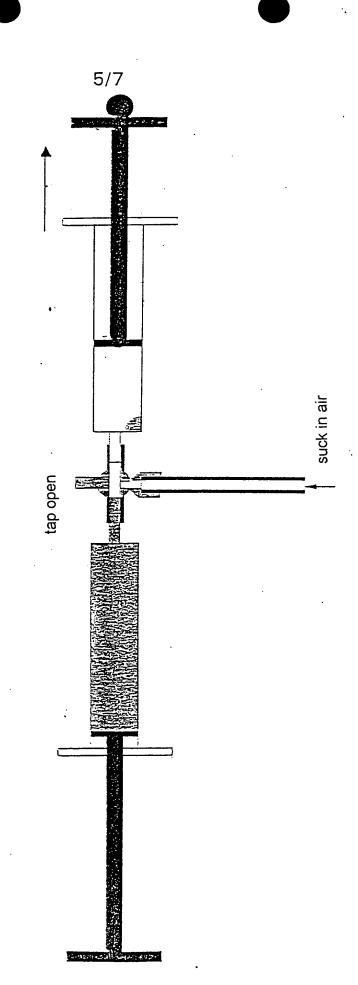


Figure 6

Uptake of master mix

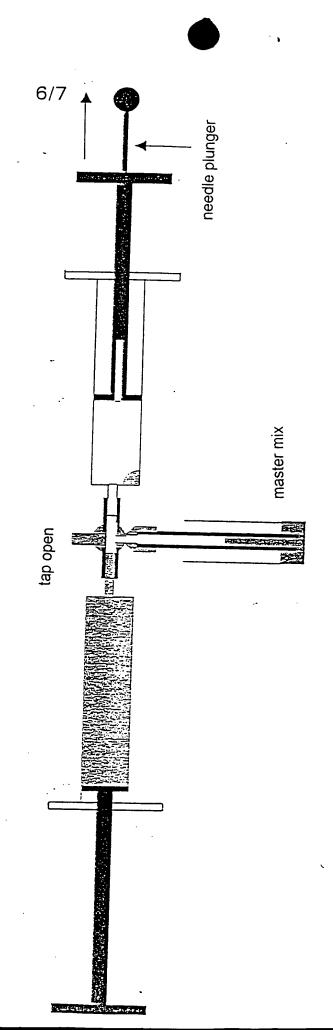


Figure 7

Amplification and detection

